



# Easy Set Up Instructions

FOR THE C.A.R.E 2000

## SAFETY WARNINGS

- CAUTION BEFORE PLUGGING THE UNIT INTO OUTLET - REMOVE ULTRAVIOLET BULBS (WRAPPED IN BUBBLE WRAP) FROM INSIDE GREY FOAM PACKING MATERIAL ON TOP OF THE UNIT. **DO NOT TOUCH UV BULBS WITH BARE HANDS. HANDLE WITH TISSUE OR GLOVES.**

## IMPORTANT INFORMATION

- SAVE THE C.A.R.E. 2000 OPERATION MANUAL FOR ALL SERVICING PROCEDURES
- SEND IN WARRANTY CARD TO REGISTER UNIT
- FOR ORDERS WITH AN EXTRA SET OF PRE AND/OR POST FILTERS - **PLEASE LOOK IN PACKING MATERIAL**

C.A.R.E 2000

TOOLS REQUIRED: A phillips screw driver  
1. Remove all packing material from the unit. Check the unit for any damage or broken pieces. If parts are damaged or broken call CWR at 1-516-674-2441.

**SAVE ALL SHIPPING AND PACKING MATERIAL IN CASE OF A RETURN.**

2. Select a desired location near an electrical outlet and place the unit at least 6 inches from the wall. Face unit towards room for maximum air exchange.

3. **SEE SAFETY WARNING - ULTRAVIOLET BULBS LOCATED IN GREY FOAM PACKING MATERIAL.**

A. Using a phillips head screw driver, remove 4 screws on top access panel. **FIG.2**

B. Inside the unit, lift off the shield plate, attached with velco strips **FIG.3**

C. Insert Ultraviolet Bulbs into sockets. **FIG.4**

D. Re-attach shield plate with velco strips.

E. Line up top access panel with 4 holes and replace screws.

4. Plug unit into outlet. Turn fan knob to the desired speed setting - usually low

5. The **GREEN** Ultraviolet indicator light on the control area should be lit. **The light will be off if the Ultraviolet bulbs are damaged or burnt out.**

6. The **RED** indicator light should be off. **It lights up when it is time to clean the prefilter or change the HEPA filter.**

FOR THE BEST AIR QUALITY

Keep the C.A.R.E 2000 running 24 hours a day.

FIG.2



FIG.3



FIG.4



**STAND UNIT UPRIGHT AND PLUG INTO WALL OUTLET, TURN UNIT TO DESIRED SPEED.**